


CUBE




CYLINDER

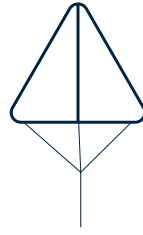

PYRAMIDE



HORIZONTAL TUBE

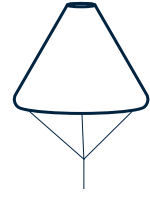

CONE

Inflation

1. Clean an area, where the float should be placed.
Mainly sharp objects and chemicals have to be removed.
Use of protection blanket is recommended.
2. Remove float from bag and unroll it.
3. Check position and function of all valves.
There always must be one black (inflation) valve and one red (overpressure) valve on float.
A base part of black valve must be properly tighten (check a valve seal before use), small black cap must stay open.
Red overpressure valve must be installed on its position, well tighten to prevent air leak.
In a case float was not used for longer time period, it is recommended to check functioning of all overpressure valves by pushing the spring with a finger or blowing through the valve.
Parallely, seats of all valves shall be checked to avoid sand grains or dirt to block closing the valve.
4. Inflate float by connect a hose of pump to the black valve and start inflation, ideally till the moment when overpressure valve would open automatically.
Overpressure valves are calibrated to the maximum allowable pressure, do not overpressure your float more as necessary.
Do not disable overpressure valves, it may cause a rupture!
5. After releasing an inflation hose, do not forget to close and tight the small cap of inflation valve.
6. If float is equipped by weight system (Cylinder float), install it and fill the bag with sand.
7. Place float into water, anchor by ropes and enjoy your AXION Float!

Deflation

1. Remove float from water and let it dry.
2. Detach weight system (if equipped).
3. Open inflation valve to release air from float.
Wait few minutes or use pump for deflation of rest air from float.
4. Start to fold deflated float towards to valves. In this way you will release the rest of air out of the float.
5. Screw all valves back into their position.
6. Put the float back to bag.

Note

- 1.** | Avoid open flame, sharp objects and chemicals.
Clean by water only! Do not use aggressive dissolvent!
Store dry!
Product is made from 100% PVC.
It can be damaged by rough handling!
- 2.** | Do not overpressure!
By exposing to sun, internal pressure is naturally increasing.
Overpressure is released by RED overpressure valve, there must be placed on right position.
Once the air comes cooler (mainly in the evening), internal pressure goes down.
There can be the necessity to refill missing air.
- 3.** | Always screw all valves back into their position after use! Unscrew valves can damage valve bases.